


Streaker Class Owners Association Guide to Builders and Measurers

November 2011

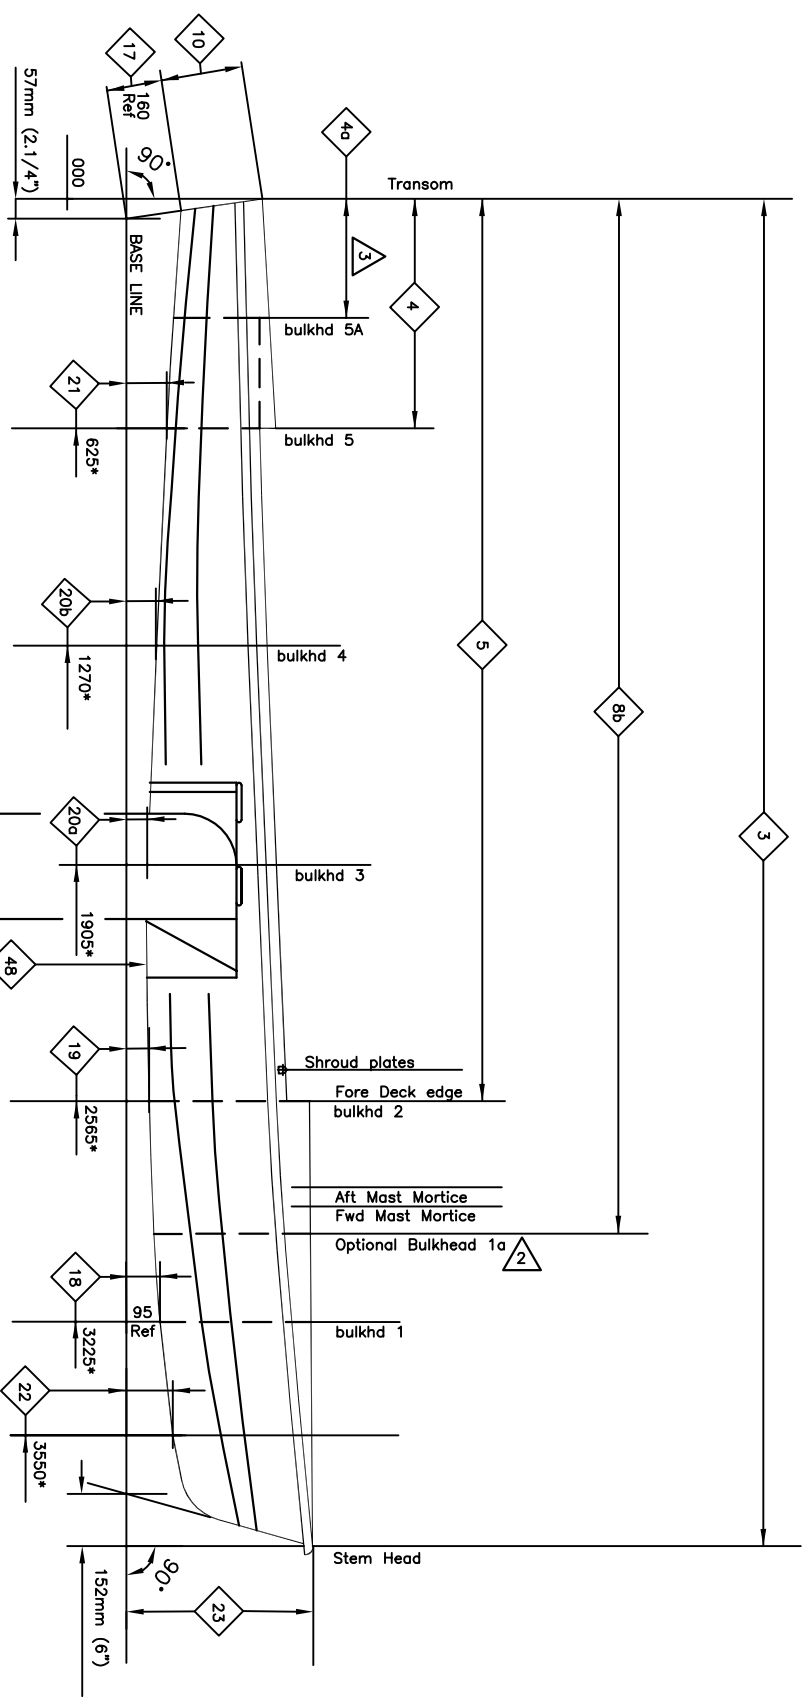

NOTE
 Dimensions shown with an
 Asterisk are measured along the
 outside of the skin on the
 centreline of the hull.

STREAKER CLASS OWNERS ASSOCIATION
 GUIDE TO BUILDERS & MEASURERS
 SHEET No1