



2

NOTE
 Dimensions shown with an Asterisk
 are measured along the outside of
 the skin on the junction of the
 chine panels or the centreline of
 the hull as appropriate.

**STREAKER CLASS OWNERS ASSOCIATION
 GUIDE TO BUILDERS & MEASURERS
 - SHEET No2 (Underside up)**

ISSUE 3 November 2011