

Measurements shown with an Asterisk are taken at points measured along the outside of the skin on the intersection of the hull panels (chines).

GUIDE TO BUILDERS & MEASURERS

- SHEET No 4

ISSUE 5

March 2013